

| | | |
|---------|---------|----|
| 3.3V | | 5V |
| GPIO 2 | | 5V |
| GPIO 3 | GND | |
| GPIO 4 | GPIO 14 | |
| GND | GPIO 15 | |
| GPIO 17 | GPIO 18 | |
| GPIO 27 | GND | |
| GPIO 22 | GPIO 23 | |
| 3.3V | GPIO 24 | |
| GPIO 10 | GND | |
| GPIO 9 | GPIO 25 | |
| GPIO 11 | GPIO 8 | |
| GND | GPIO 7 | |
| DNC | DNC | |
| GPIO 5 | GND | |
| GPIO 6 | GPIO 12 | |
| GPIO 13 | GND | |
| GPIO 19 | GPIO 16 | |
| GPIO 26 | GPIO 20 | |
| GND | GPIO 21 | |

| | | |
|-----------------|----------------|----|
| 3.3V | | 5V |
| Up | | 5V |
| Down | GND | |
| Left | V (P2 "L") | |
| Right | G (P2 "R") | |
| | 1 (P1 "Start") | |
| B | GND | |
| A | | X |
| 3.3V | | Y |
| Select (Rshift) | GND | |
| Start (Enter) | L | |
| R | Menu (F1) | |
| GND | Quit (Esc) | |
| DNC | DNC | |
| U (P2 "Up") | GND | |
| C (P2 "Down") | W (P2 "B") | |
| S (P2 "Left") | GND | |
| T (P2 "Right") | D (P2 "X") | |
| I (P2 "A") | Z (P2 "Y") | |
| GND | 2 (P2 "Start") | |

| | | |
|-----------------|----------------|----|
| 3.3V | | 5V |
| Up | | 5V |
| Down | GND | |
| Left | V (P2 "L") | |
| Right | G (P2 "R") | |
| | 1 (P1 "Start") | |
| B | GND | |
| A | | X |
| 3.3V | | Y |
| Select (Rshift) | GND | |
| Start (Enter) | L | |
| R | Menu (F1) | |
| GND | Quit (Esc) | |
| DNC | DNC | |
| U (P2 "Up") | GND | |
| C (P2 "Down") | W (P2 "B") | |
| S (P2 "Left") | GND | |
| T (P2 "Right") | D (P2 "X") | |
| I (P2 "A") | Z (P2 "Y") | |
| GND | 2 (P2 "Start") | |

2.00in

| | | |
|-----------------|---------|------------------------|
| 3.3V | | 5V |
| Up | GPIO 2 | 5V |
| Down | GPIO 3 | GND |
| Left | GPIO 4 | GPIO 14 V (P2 "L") |
| | GND | GPIO 15 G (P2 "R") |
| Right | GPIO 17 | GPIO 18 1 (P1 "Coin") |
| B | GPIO 27 | GND |
| A | GPIO 22 | GPIO 23 X |
| 3.3V | | GPIO 24 Y |
| Select (Rshift) | GPIO 10 | GND |
| Start (Enter) | GPIO 9 | GPIO 25 L |
| R | GPIO 11 | GPIO 8 Menu (F1) |
| GND | GPIO 7 | Quit (Esc) |
| DNC | DNC | |
| U (P2 "Up") | GPIO 5 | GND |
| C (P2 "Down") | GPIO 6 | GPIO 12 W (P2 "B") |
| S (P2 "Left") | GPIO 13 | GND |
| T (P2 "Right") | GPIO 19 | GPIO 16 D (P2 "X") |
| I (P2 "A") | GPIO 26 | GPIO 20 Z (P2 "Y") |
| GND | | GPIO 21 2 (P2 "Start") |

| | | |
|---------|---------|----|
| 3.3V | | 5V |
| GPIO 2 | | 5V |
| GPIO 3 | GND | |
| GPIO 4 | GPIO 14 | |
| GND | GPIO 15 | |
| GPIO 17 | GPIO 18 | |
| GPIO 27 | GND | |
| GPIO 22 | GPIO 23 | |
| 3.3V | GPIO 24 | |
| GPIO 10 | GND | |
| GPIO 9 | GPIO 25 | |
| GPIO 11 | GPIO 8 | |
| GND | GPIO 7 | |
| DNC | DNC | |
| GPIO 5 | GND | |
| GPIO 6 | GPIO 12 | |
| GPIO 13 | GND | |
| GPIO 19 | GPIO 16 | |
| GPIO 26 | GPIO 20 | |
| GND | GPIO 21 | |

| | | |
|-----------------|----------------|----|
| 3.3V | | 5V |
| Up | | 5V |
| Down | GND | |
| Left | V (P2 "L") | |
| GND | G (P2 "R") | |
| Right | 1 (P1 "Start") | |
| B | GND | |
| A | | X |
| 3.3V | | Y |
| Select (Rshift) | GND | |
| Start (Enter) | L | |
| R | Menu (F1) | |
| GND | Quit (Esc) | |
| DNC | DNC | |
| U (P2 "Up") | GND | |
| C (P2 "Down") | W (P2 "B") | |
| S (P2 "Left") | GND | |
| T (P2 "Right") | D (P2 "X") | |
| I (P2 "A") | Z (P2 "Y") | |
| GND | 2 (P2 "Start") | |

2.76in